



ASSEMBLY INSTRUCTION




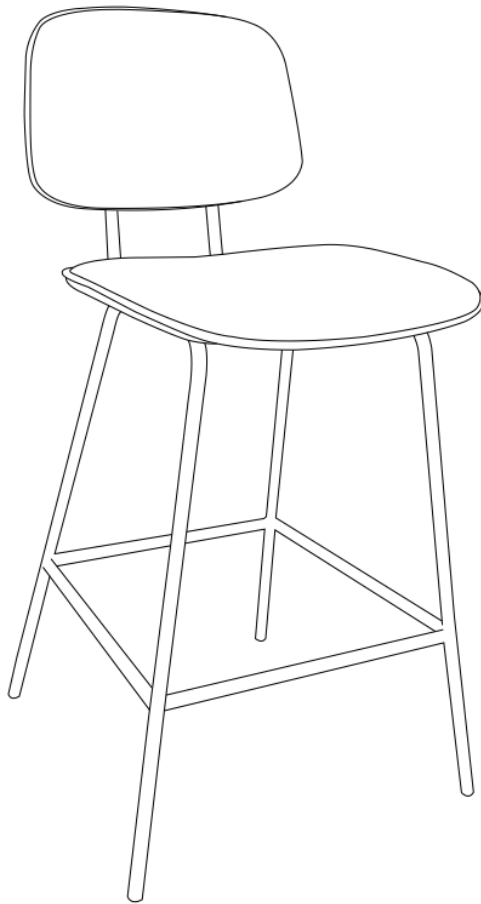



# BRYAN BAR CHAIR



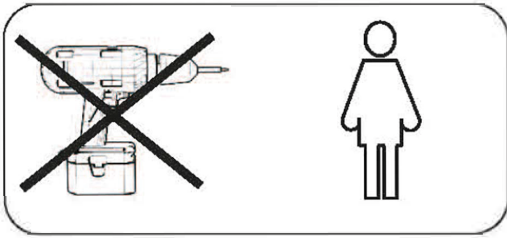
**ROWICO**

HOME

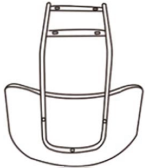


<p><b>Ax4</b></p>  <p>M6×20MM</p>	<p><b>Dx1</b></p> 
<p><b>Bx4</b></p>  <p>M6×25MM</p>	<p><b>Ex4</b></p> 
<p><b>Cx1</b></p> 	<p><b>Fx1</b></p>  <hr/> <p><b>Gx4</b></p> 

①

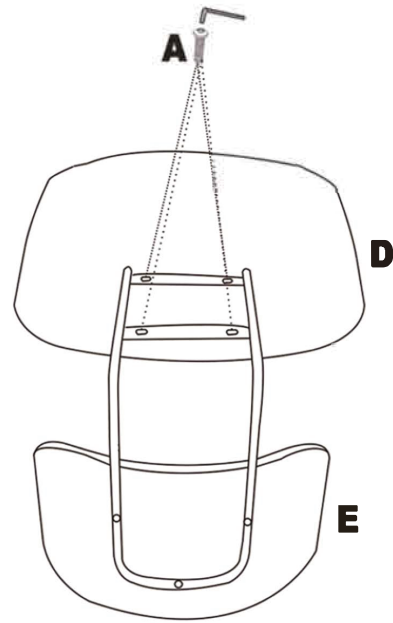

②

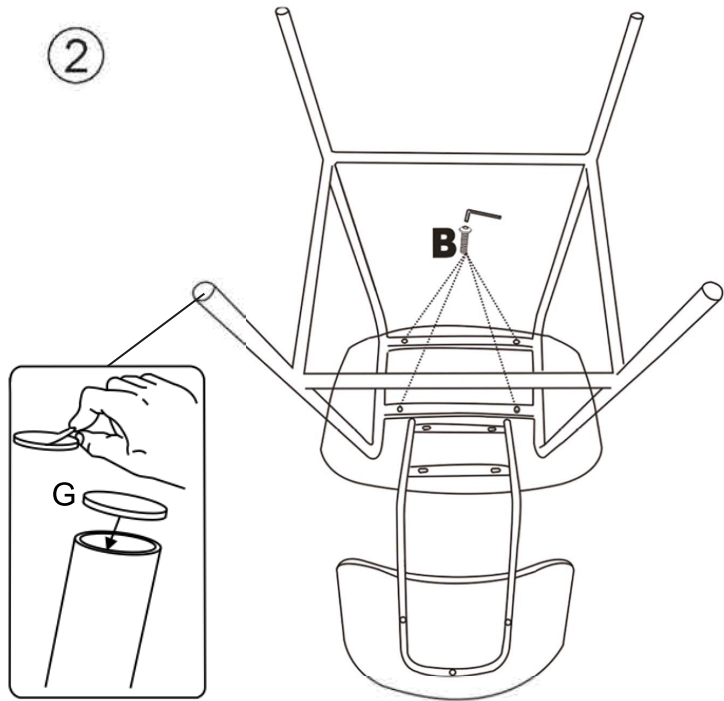

③

