

KUPLAT 480


Asennusohje
V.14A

INNOLUX
design Yki Nummi

Osat:

1 x Kupu

Ripustussarjan tarvikkeet:

1 x Valaisinjohto 

1 x Valaisinpistotulppajohto 


1 x Messingin värinen kartiokuppi 

1 x Kattokuppi 


1 x Ripustuskoukku 

1 x Musta tiiviste, riviliitin 


1 x Ruuvimeisseli 

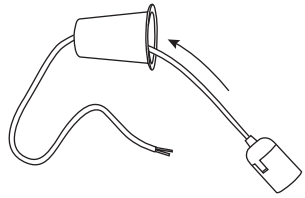


1 Pujota valaisinjohto kartiokupin läpi.

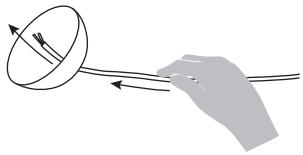

3 Pujota valaisinjohto kattokupin läpi.

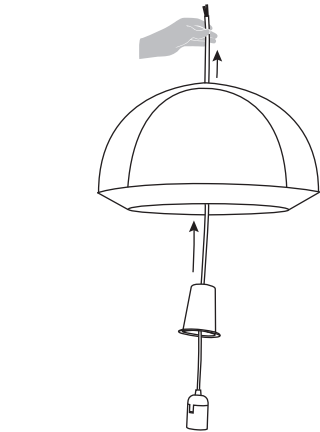


2 Pujota valaisinjohto kuvun läpi alakautta.

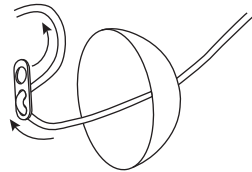


4 Pujota ripustuskoukku valaisinjohtoon.

INNOLUX
Home of good light.


A Kattopistorasia:

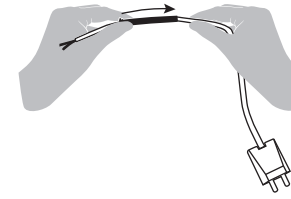


5 Pujota valaisinpistotulpan johto mustan tiivistein läpi.

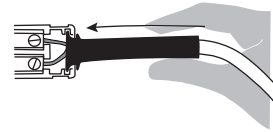

7 Siirrä musta tiiviste paikalleen.

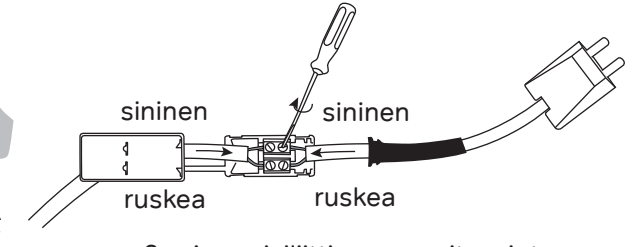


6 Avaa riviliittimen ruuvit, pujota molempien johtojen päät paikoilleen riviliittimeen ja kiristä ruuvit.

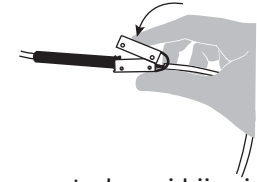


8 Napsauta kansi kiinni, varmista että kaikki neljä hakasta kiinnittyvät.


B Ei kattopistorasiaa:

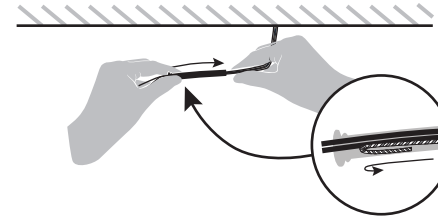


5 Taita keltavihreä katosta tuleva johto kaksinkerroin ja pujota kaikki katosta tulevat johtimet tiivistein läpi.

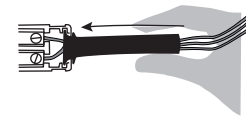

7 Siirrä musta tiiviste paikalleen.

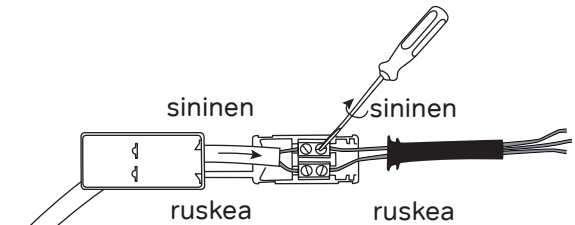


6 Avaa riviliittimen ruuvit, pujota valaisinjohtoon sekä katosta tulevien johtimien päät riviliittimeen ja kiristä ruuvit.

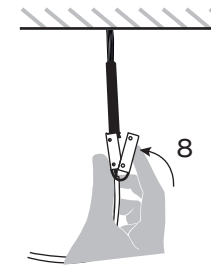


8 Napsauta kansi kiinni, varmista että kaikki neljä hakasta kiinnittyvät.

(A) Kattopistorasia:


1

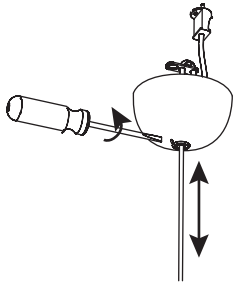


2

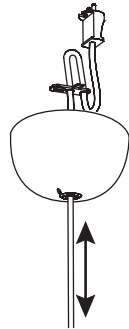

3

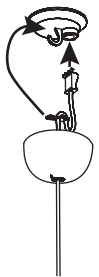


4

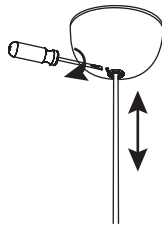


(B) Ei kattopistorasiaa:


1

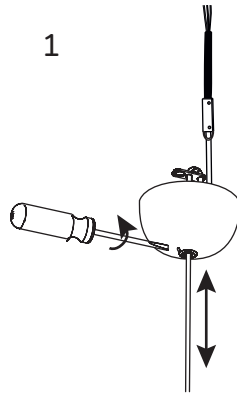


2

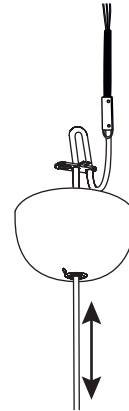

3

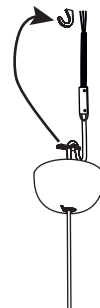

4

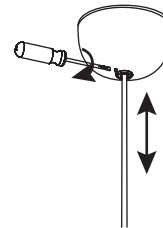

KUPLAT 480 (BUBBLES)


Installation instructions
V.14A


Parts:

1 x Lampshade

Suspension set supplies:


1 x Cord 

1 x Ceiling plug cord 

1 x Brass cone-shaped cup 


1 x Ceiling-rose 

1 x Cord-strain 


1 x Rubber sleeve, two poles terminal block 

1 x Screwdriver 

INNOLUX
design Yki Nummi

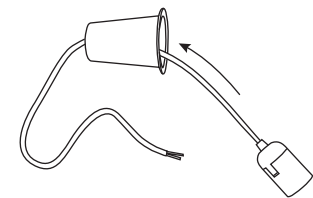


1 Thread the cord through the cone-shaped cup.

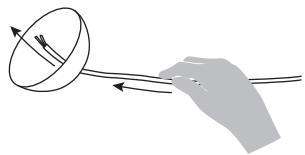

3 Thread the cord through the ceiling-rose.




2 Thread the cord through the lampshade from underneath.

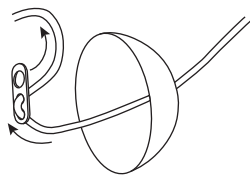


4 Insert cord-strain to the cord.

INNOLUX
Home of good light.


A Roof socket:

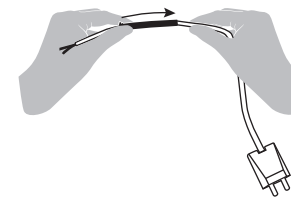


5 Insert the ceiling plug cord through the rubber sleeve.

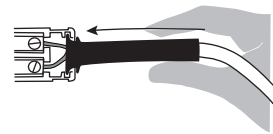

7 Move the rubber sleeve to its place.

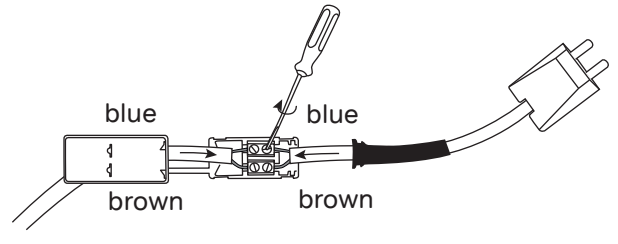


6 Open the screws of two poles terminal block, insert the ends of the cords in their places and tighten the screws firmly.

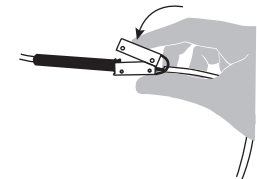


8 Close the cover so that all four staples click.


B No roof socket:

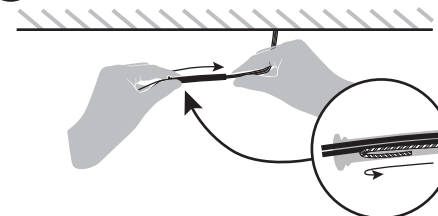


5 Fold the yellowgreen ceiling wire and insert all the ceiling wires through the rubber sleeve.

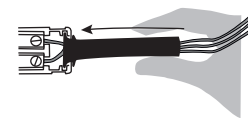

7 Move the rubber sleeve to its place.

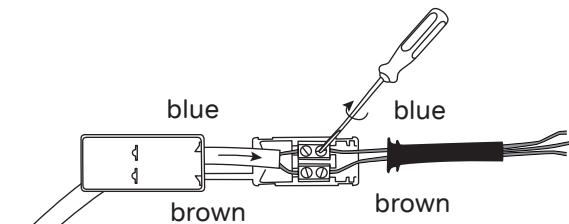


6 Open the screws of two poles terminal block, insert the ends of the cord and the ceiling wires (not the yellowgreen wire) in their places and tighten the screws firmly.

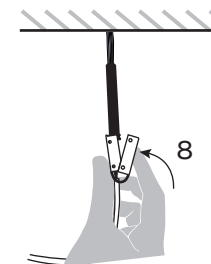


8 Close the cover so that all four staples click.

(A) Roof socket:


1

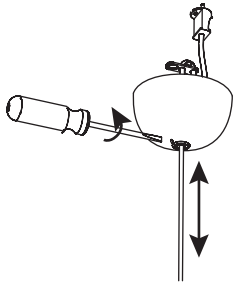


2

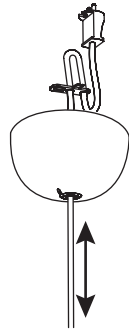

3

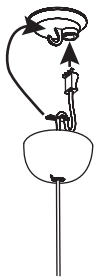


4

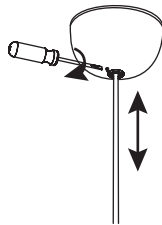


(B) No roof socket:


1

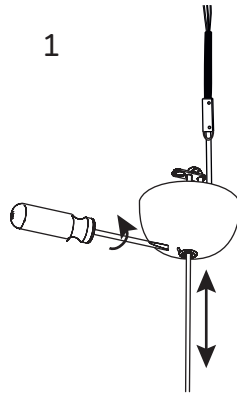

2

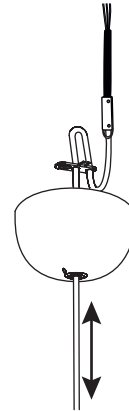

3

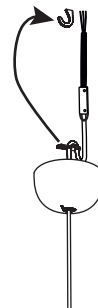

4

